


Licence Keys and Configuration


iVN Licence

When iVN is launched for the first time you will be shown the licence dialog and asked to enter your Licence Code

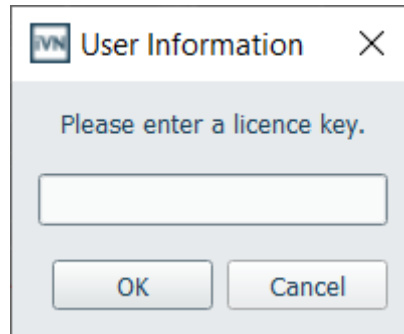

You will have been sent a Licence Key code from IES. If you do have this then please contact your Account Manager or else keys@iesve.com to request it.

When a valid licence is entered the application will launch, showing the Welcome section of the Homepage.

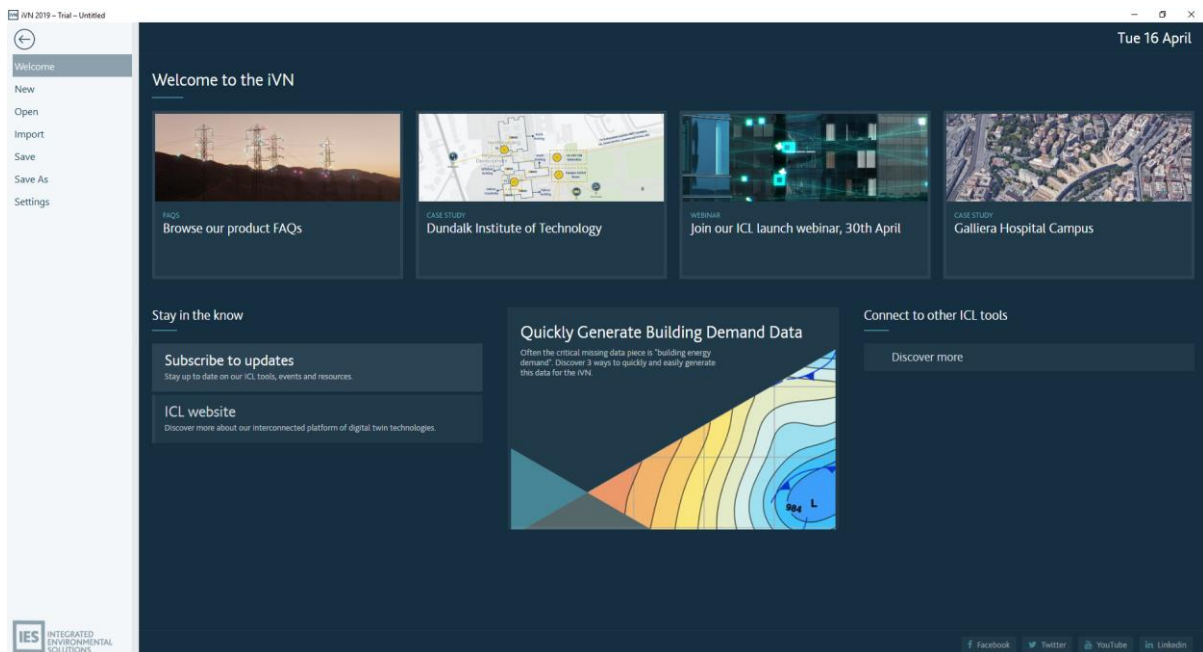


VE Licence

When VE is launched for the first time it will open with no applications loaded. You are required to request the VE_Kernel licence in order to be able to run Energy simulations from iVN.

This can be done by clicking Help >> Request Licence, complete the form and click Send Request.

Note this will send an email to keys@iesve.com, our team will then check your account with the Account Manager and when verified send back the licence key for VE Kernel

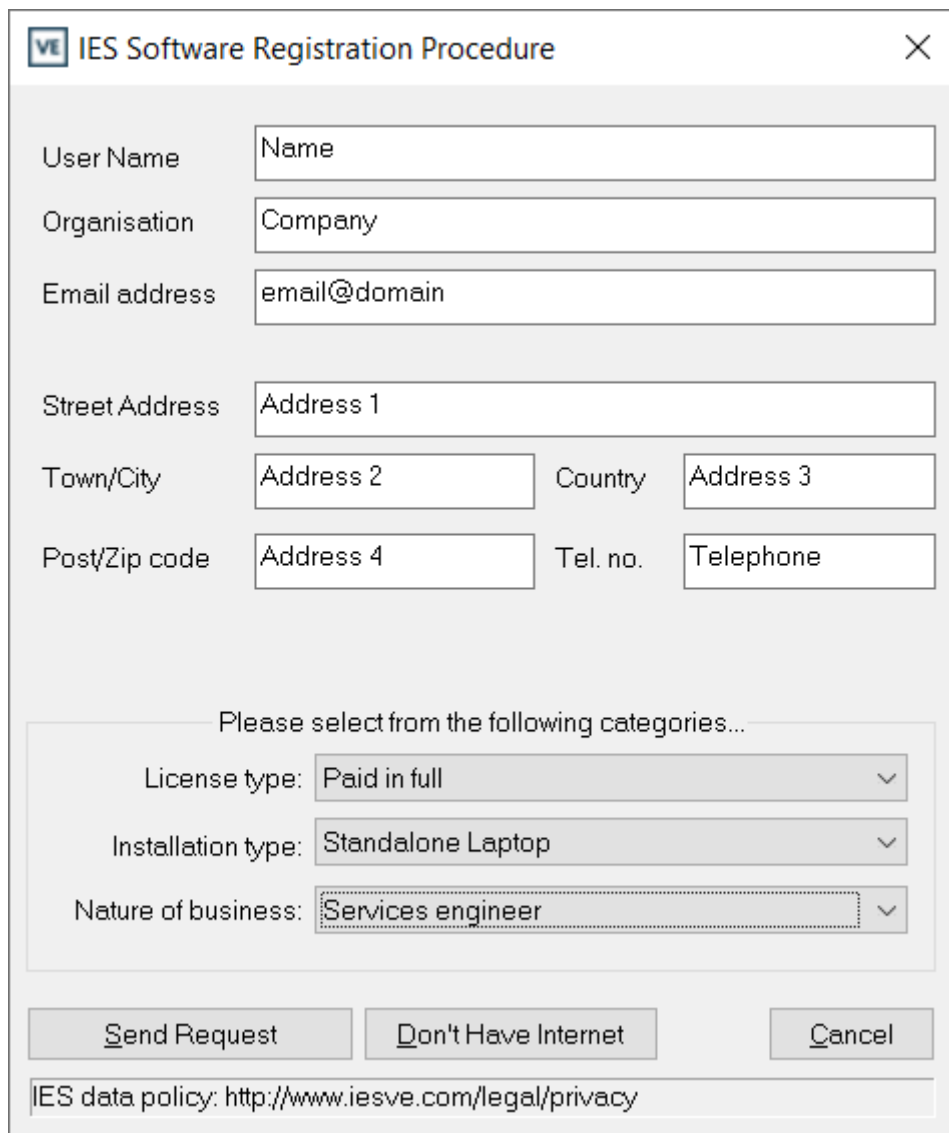

IES Software Registration Procedure [X]

User Name:

Organisation:

Email address:

Street Address:

Town/City: Country:

Post/Zip code: Tel. no.:

Please select from the following categories...

License type: [v]

Installation type: [v]


Nature of business: [v]

IES data policy: <http://www.iesve.com/legal/privacy>

iVN & VE Configuration

The final step required for Energy simulation is to connect the iVN to point to VE with energy simulation licence.

Do this in iVN from the Settings menu on the Home-page

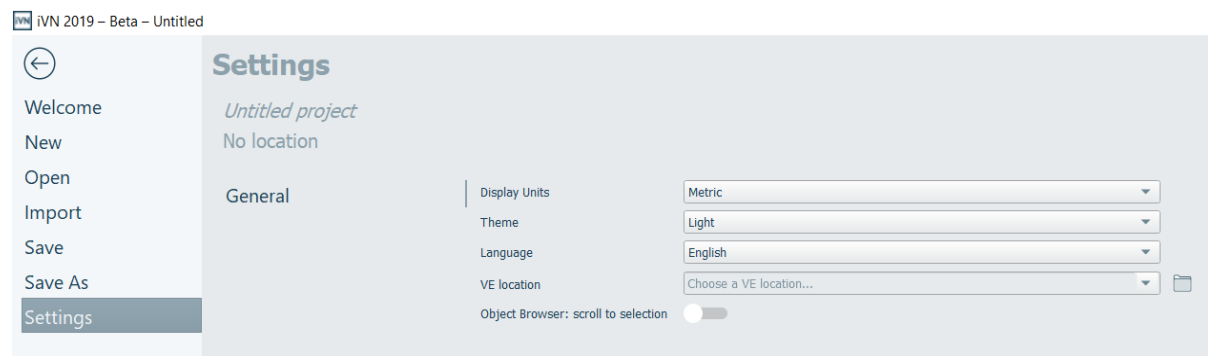

Click browse icon on VE Location and then browse to the VE 2018.2.0.0 installation at C:\Program Files (x86)\IES\VE 2018\apps

When the path is set correctly and accepted then the text is grey

